

Password reset for FX-888D

• Password reset mode

Turn on the power switch while pressing the ENTER button. The unit will enter the password reset mode.

You cannot perform the password reset if one minute have passed after turning on.



DONGLE

How to reset the password

Turn OFF the power switch

- 1) Turn on the power switch without connection while pressing the ENTER button.

S-E is displayed on the LED. ※No changes on the display



LED display



- 2) Connect the dongle to connector, and make sure that the display is changed from S-E to temperature increase.



Sensor temperature (below 100°C) is displayed after setting temperature is displayed.



- 3) Disconnect the dongle and make sure that S-E is displayed.



LED display



- 4) Connect the dongle again and keep the condition for approx five seconds.



Sensor temperature (below 100°C) is displayed after setting temperature is displayed.



Within five seconds.

rSt is not displayed.
(Not completed)

- 5) The password reset has performed if "rSt" is displayed.

(Now the password reset is complete)



LED display (be displayed for two seconds)



- 6) Turn OFF the power switch